


## SUPER MULTIPLE JUNCTION (SMJ)

---

### Disconnecting and Connecting

- SMJ is located on left side of dash.
- To disconnect SMJ, loosen fixing bolt.

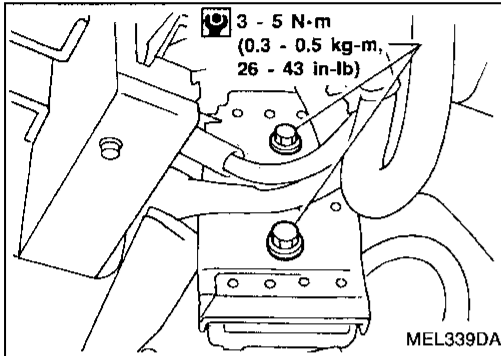

- To install SMJ, tighten bolts until orange "full-tight" mark appears and then retighten to specified torque as required.



 : 3 - 5 N·m  
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

#### CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

# SUPER MULTIPLE JUNCTION (SMJ)


## Terminal Arrangement

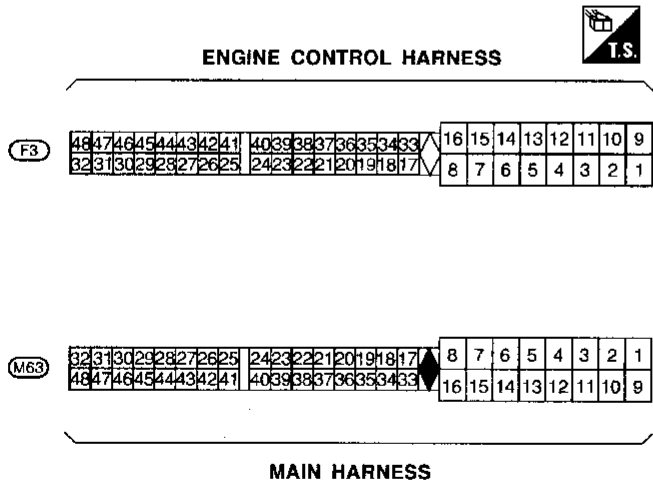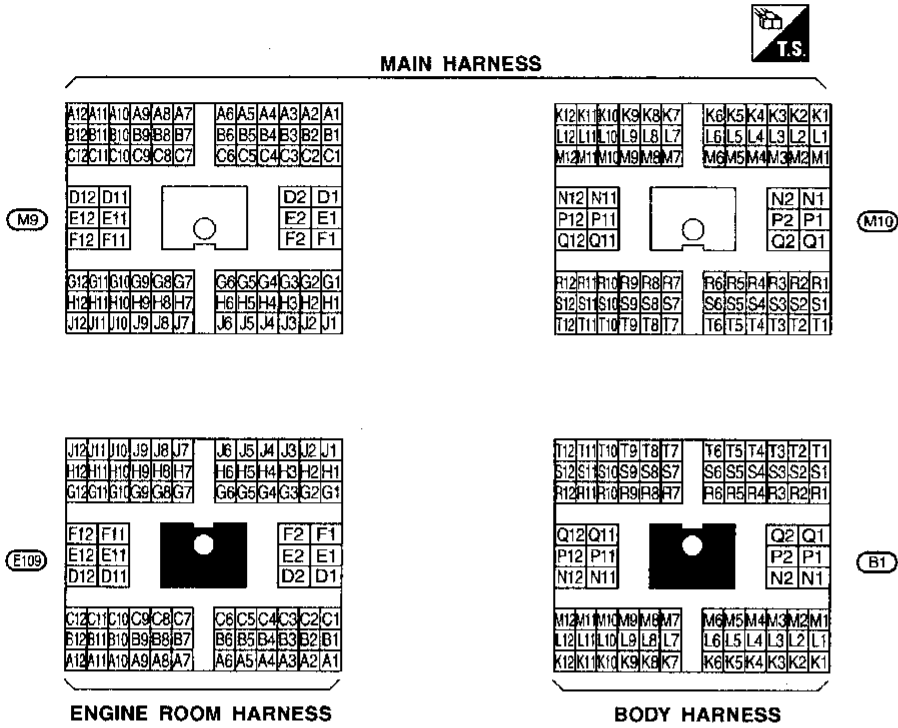

# ELECTRICAL UNITS

## Terminal Arrangement
 
### ECM (ECCS CONTROL MODULE)




View from harness side

### A/T CONTROL UNIT



 View from harness side

### SMART ENTRANCE CONTROL UNIT



View from harness side