



SUPER MULTIPLE JUNCTION (SMJ)

Disconnecting and Connecting

- SMJ is located on left side of dash.
- To disconnect SMJ, loosen fixing bolt.

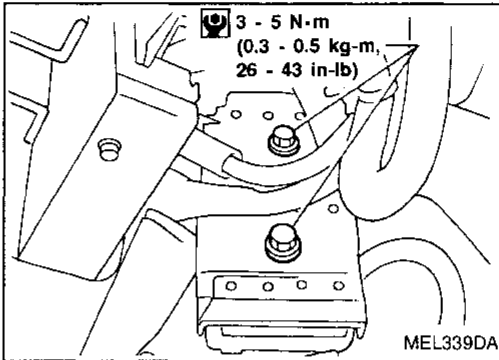

- To install SMJ, tighten bolts until orange “full-tight” mark appears and then retighten to specified torque as required.



 : 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

SUPER MULTIPLE JUNCTION (SMJ)


Terminal Arrangement

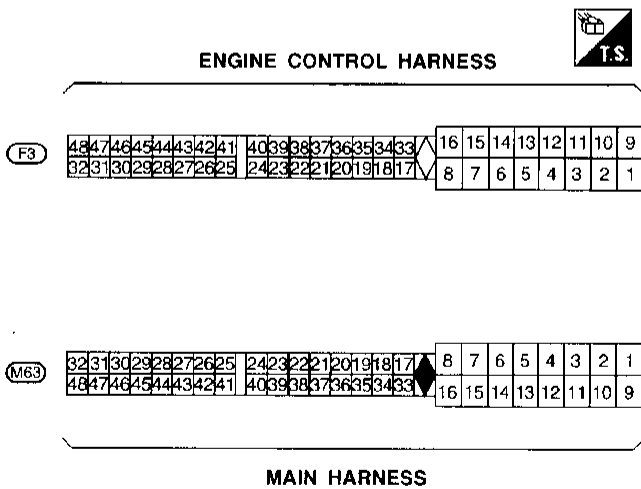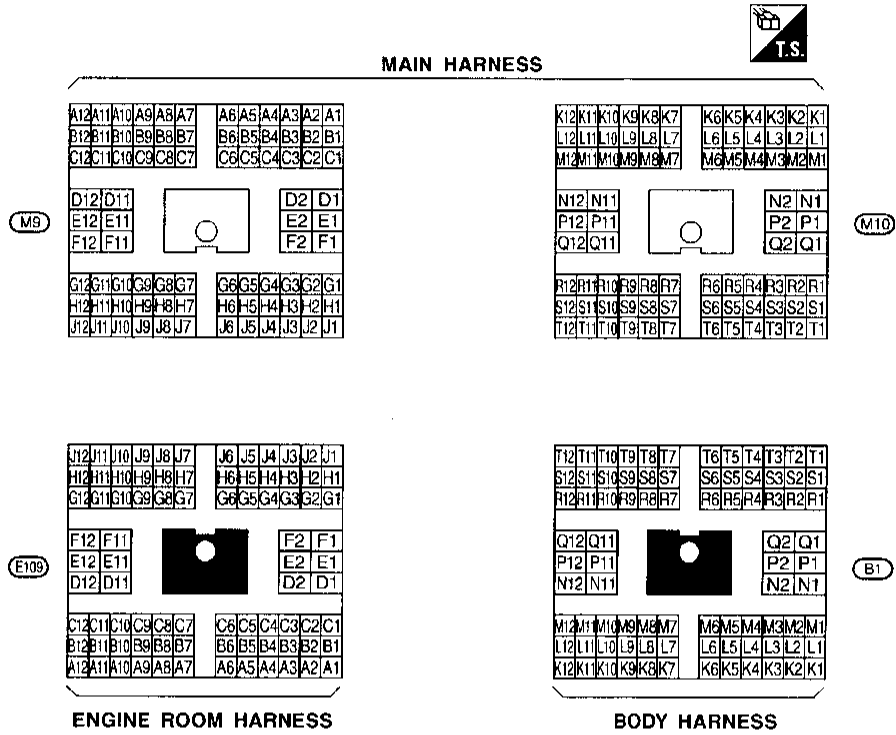

ELECTRICAL UNITS

Terminal Arrangement

 ECM (ECCS CONTROL MODULE)




View from harness side

TCM (TRANSMISSION CONTROL MODULE)



View from harness side

 SMART ENTRANCE CONTROL UNIT



View from harness side