

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

AAC/V - Wiring diagram..... EC-291  
 ABS (anti-lock brake system) ..... BR-28  
 ABS input/output signal inspection ..... BR-72  
 A/C - Wiring diagram ..... HA-40  
 A/C air flow..... HA-19  
 A/C component layout..... HA-18  
 A/C compressor clutch removal and installation..... HA-71  
 A/C compressor description..... HA-12  
 A/C compressor mounting ..... HA-70  
 A/C compressor precaution ..... HA-6  
 A/C compressor special service tool ..... HA-6  
 A/C control linkage adjustment ..... HA-61  
 A/C control operation ..... HA-20  
 A/C diagnostic work flow..... HA-21  
 A/C harness layout..... HA-38  
 A/C HFC134a (R134a) system precaution ..... HA-2  
 A/C HFC134a (R134a) system service procedure..... HA-63  
 A/C HFC134a (R134a) system service tools ..... HA-7  
 A/C HFC134a system service equipment precaution..... HA-9  
 A/C lubricant (R134a) ..... HA-65  
 A/C operational check..... HA-22  
 A/C performance chart..... HA-34  
 A/C performance test diagnoses ..... HA-32  
 A/C push control ..... HA-75  
 A/C relay ..... HA-60  
 A/C service data specification..... HA-76  
 A/C symptom chart ..... HA-24  
 A/C trouble diagnoses..... HA-21  
 Accelerator control system ..... FE-2  
 Accelerator wire adjustment ..... FE-2  
 Air bag ..... RS-8  
 Air bag disposal ..... RS-16  
 Air bag precautions ..... GI-2  
 Air bleeding (hydraulic clutch) ..... CL-6  
 Air bleeding for brake system ..... BR-7  
 Air cleaner filter replacement..... MA-13  
 Air conditioner - Wiring diagram ..... HA-41  
 Air conditioner cut control ..... EC-18  
 Air flow meter - See Mass air flow sensor ..... EC-102  
 Air mix door control linkage adjustment..... HA-61  
 Air mix. door motor ..... HA-61  
 Air spoiler, front..... BT-24  
 Air spoiler, rear ..... BT-24  
 Alternator ..... EL-30  
 Angular tightening application ..... EM-2  
 Antenna - See Power antenna ..... EL-116  
 AP/SEN - Wiring diagram ..... EC-111  
 ASCD (automatic speed control device) .... EL-124  
 ASCD - Wiring diagram ..... EL-128  
 A/T - Wiring diagram ..... AT-11  
 A/T diagnosis communication line ..... EC-405

A/T fluid temperature sensor ..... AT-85, 149  
 A/T self-diagnoses..... AT-40  
 A/T shift lock system ..... AT-174  
 A/T shift lock system - Wiring diagram ..... AT-175  
 AT/C - Wiring diagram..... EC-303  
 ATDIAG - Wiring diagram ..... EC-405  
 Audio ..... EL-111  
 AUDIO - Wiring diagram..... EL-112  
 Audio and A/C control removal and installation - See Instrument panel ..... BT-16  
 Automatic speed control system - See ASCD ..... EL-124  
 Automatic transmission fluid replacement..... MA-18  
 Automatic transmission number..... GI-38  
 Auxiliary air control (AAC) valve ..... EC-291  
 Axle housing (rear)..... RA-9

## B

Back-up lamp ..... EL-49  
 Back-up lamp switch (M/T) ..... MT-7, 10  
 BACK/L - Wiring diagram ..... EL-49  
 Ball joint front axle ..... FA-16  
 Battery ..... EL-16  
 Baulk ring (M/T)..... MT-11  
 Bi-level door control linkage adjustment ..... HA-62  
 Blower motor ..... HA-59  
 Blower resistor ..... HA-59  
 Board-on lift ..... GI-40  
 Body alignment ..... BT-42  
 Boring/horning cylinder block ..... EM-41  
 BPT valve ..... EC-255  
 Brake booster ..... BR-12  
 Brake control valve (Proportioning valve) ..... BR-5  
 Brake fluid change ..... BR-6  
 Brake fluid level ..... MA-19  
 Brake fluid level and line check ..... BR-6  
 Brake hydraulic line..... BR-4  
 Brake inspection ..... MA-20  
 Brake lines and cables inspection ..... MA-20  
 Brake master cylinder ..... BR-9  
 Brake pedal ..... BR-8  
 Bulb specifications ..... EL-217  
 Bumper, front ..... BT-6  
 Bumper, rear ..... BT-9  
 BUZZER - Wiring diagram..... EL-83  
 BYPS/V - Wiring diagram ..... EC-383

## C

Camshaft inspection ..... EM-27  
 CANI/V - Wiring diagram ..... EC-393  
 Canister-See EVAP canister ..... EC-20  
 Center bearing assembly (propeller shaft)..... PD-9

# ALPHABETICAL INDEX

Center bearing disassembly (propeller shaft).....	PD-9
CHARGE - Wiring diagram.....	EL-27
Charging system.....	EL-26
Chassis and body maintenance.....	MA-17
CIGAR - Wiring diagram.....	EL-101
Cigarette lighter.....	EL-101
Circuit breaker.....	EL-12
CKPS - Wiring diagram.....	EC-232, 324
Clock.....	EL-102
CLOCK - Wiring diagram.....	EL-102
Clutch cover.....	CL-11, 12
Clutch disc.....	CL-11
Clutch fluid level.....	MA-17
Clutch master cylinder.....	CL-7
Clutch operating cylinder.....	CL-8
Clutch pedal.....	CL-4, 5
Clutch release bearing.....	CL-9
Clutch release mechanism.....	CL-9
Clutch withdrawal lever.....	CL-9
CMPS - Wiring diagram.....	EC-237
Coil spring (front).....	FA-14
Coil spring (rear).....	RA-21
Collision diagnosis.....	RS-43
Combination lamp, rear, removal and installation.....	BT-24
Combination meter.....	EL-70
Combination meter removal and installation - See Instrument panel.....	BT-16
Combination switch.....	EL-31
Compression pressure.....	EM-11
Compressor clutch removal and installation.....	HA-71
Compressor description.....	HA-12
Compressor mounting.....	HA-70
Compressor precaution.....	HA-6
Compressor special service tool.....	HA-6
Connecting rod.....	EM-40
Connecting rod bearing clearance.....	EM-43
Connecting rod bushing clearance.....	EM-44
Connector inspection.....	GI-18
Console box - See Instrument panel.....	BT-16
CONSULT for ECCS.....	EC-54
CONSULT general information.....	GI-34
Control lever (M/T).....	MT-12
Control valve (A/T).....	AT-206
Converter housing installation.....	AT-186
Coolant mixture ratio.....	MA-9
Coolant replacement.....	MA-11
Cooling circuit (engine).....	LC-7
Cooling fan.....	LC-13
Cooling fan motor.....	EC-424
Cooling fan relay.....	EC-424
Counter gear (M/T).....	MT-11
Coupling sleeve (M/T).....	MT-11
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-237
Crankcase emission control system - See positive crankcase ventilation.....	EC-25
Crankcase ventilation system - See Positive crankcase ventilation.....	EC-25

Crankshaft.....	EM-41
Crankshaft position sensor (OBD).....	EC-232
Cruise control - See ASCD.....	EL-124
Cylinder block.....	EM-37
Cylinder block boring.....	EM-41
Cylinder head.....	EM-25
Cylinder head bolt tightening.....	EM-21

## D

Daytime running light - See Daytime light system.....	EL-39
DEF - Wiring diagram.....	EL-104
Detonation sensor - See Knock sensor.....	EC-229
Diagnosis sensor unit.....	RS-11
Diagnostic trouble code (DTC) inspection priority chart.....	EC-76
Differential carrier assembly.....	PD-29
Differential carrier disassembly.....	PD-15
Differential gear oil replacement.....	MA-19
Dimensions.....	GI-39
Distributor.....	EC-17
Distributor ignition (DI) system.....	EC-17
D/LOCK - Wiring diagram.....	EL-153
Dome light - See Interior lamp.....	EL-66
Door glass.....	BT-11
Door glass Fitting Adjustment.....	BT-12
Door lock.....	BT-11
Door mirror.....	BT-41
Door trim.....	BT-21
Door, front.....	BT-11
Drive belt inspection.....	MA-10
Drive pinion diff. inspection.....	PD-19
Drive plate runout.....	EM-45
Drive shaft (rear).....	RA-13
Dropping resistor (A/T).....	AT-127
DTRL - Wiring diagram.....	EL-42

## E

ECCS basic inspection.....	EC-73
ECCS circuit diagram.....	EC-9
ECCS component parts location.....	EC-10
ECCS fail-safe system.....	EC-77
ECCS on board diagnostic system.....	EC-34
ECCS symptom matrix chart.....	EC-78
ECCS system diagram and chart.....	EC-12
ECM input/output signal.....	EC-86
ECTS - Wiring diagram.....	EC-125, 141
EGR control (EGRC) - BPT valve.....	EC-251
EGR control (EGRC) - solenoid valve.....	EC-329
EGR control valve.....	EC-249, 345
EGR temperature sensor.....	EC-334
EGR/TS - Wiring diagram.....	EC-334
EGRC/V - Wiring diagram.....	EC-329
EGRC1 - Wiring diagram.....	EC-243
Electric sun roof.....	EL-121
Electrical diagnoses.....	GI-21

# ALPHABETICAL INDEX

Electrical ignition system.....	EC-17
Electrical unit.....	Foldout
Electrical units location.....	EL-200
Engine compartment.....	BT-42
Engine control module (ECM).....	EC-306
Engine coolant temperature sensor (ECTS).....	EC-125
Engine oil filter replacement.....	MA-14
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-14
Engine outer component parts.....	EM-9
Engine removal.....	EM-35
Engine room - See Engine compartment.....	BT-42
Engine serial number.....	GI-38
EVAP canister.....	EC-20
EVAP canister purge control solenoid valve.....	EC-393, 398
EVAP canister purge control valve.....	EC-393, 398
EVAP canister purge volume control valve.....	EC-20, 271, 358
EVAP canister vent control valve.....	EC-365, 378
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-20
Exhaust gas recirculation (EGR) valve.....	EC-243
Exhaust system.....	FE-7
Exhaust system inspection.....	MA-17
Exterior.....	BT-24
Exterior lamp.....	EL-47

## F

Fan switch.....	HA-59
F/FOG - Wiring diagram.....	EL-52
FICD - Wiring diagram.....	EC-443
Fifth position switch.....	EC-448
Final drive disassembly.....	PD-15
Final drive pre-inspection.....	PD-15
Finisher, interior - See Trim.....	BT-19
Finisher, rear panel.....	BT-23
Floor trim.....	BT-19
Flow charts.....	GI-31
Fluid temperature sensor (A/T).....	AT-85, 149
Fluids.....	MA-8
Flywheel (clutch).....	CL-12
Flywheel runout.....	EM-45
Fog lamp, front.....	EL-51
Fork rod (M/T).....	MT-12
Forward clutch.....	AT-225
F/PUMP - Wiring diagram.....	EC-431
FRO2 - Wiring diagram.....	EC-146
FRO2/H - Wiring diagram.....	EC-177
Front air spoiler.....	BT-24
Front axle.....	FA-9
Front bumper.....	BT-6
Front disc brake.....	BR-14
Front door.....	BT-11
Front fog lamp.....	EL-51
Front oxygen sensor (O2S) monitor.....	EC-46
Front passenger air bag.....	RS-13

Front seat.....	BT-31
Front seat belt.....	RS-3
Front suspension.....	FA-13
Front washer.....	EL-90
Front wiper.....	EL-90
FUEL - Wiring diagram.....	EC-210, 215
Fuel cut control (at no load & high engine speed).....	EC-19
Fuel filler lid.....	BT-9
Fuel filter.....	EC-26
Fuel filter replacement.....	MA-13
Fuel line inspection.....	MA-12
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-26
Fuel pressure release.....	EC-26
Fuel pump.....	EC-431
Fuel system.....	FE-3
Fuel tank vacuum relief valve.....	EC-21
Fuse.....	EL-12
Fusible link.....	EL-12

## G

Garage jack and safety stand.....	GI-41
Gauges.....	EL-69
Gear components (M/T).....	MT-11
Generic scan tool (GST).....	EC-67
Glass.....	BT-11
Grease.....	MA-8
Ground distribution.....	EL-13

## H

Harness connector.....	EL-3
Harness connector inspection.....	GI-18
Harness layout.....	EL-203
Hazard warning lamp.....	EL-54
Headlamp.....	EL-34
Headlamp removal and installation.....	BT-6
Headlining - See Roof trim.....	BT-22
Heated oxygen sensor heater.....	EC-156, 162, 170
Height (Dimensions).....	GI-39
HFC134a (R134a) system precaution.....	HA-2
HFC134a (R134a) system service procedure.....	HA-63
HFC134a (R134a) system service tools.....	HA-7
HFC134a system service equipment precaution.....	HA-9
High clutch.....	AT-223
H/LAMP - Wiring diagram.....	EL-35
Hood.....	BT-6
Horn.....	EL-100
HORN - Wiring diagram.....	EL-100

## I

IACV - air regulator.....	EC-442
---------------------------	--------

# ALPHABETICAL INDEX

IACV-AAC valve .....	EC-291
IACV-FICD solenoid valve .....	EC-443
IATS - Wiring diagram .....	EC-119
Identification plate .....	GI-38
Idle air control valve (IACV) .....	EC-291
Idle air control valve (IACV) - air regulator.....	EC-440
Idle mixture ratio .....	EC-28
Idle speed.....	EC-28
IGN/SG - Wiring diagram.....	EC-318
Ignition timing.....	EC-28
Ignition wire inspection.....	EC-228
ILL - Wiring diagram .....	EL-63
Illumination.....	EL-61
Inhibitor switch.....	AT-81
INJECT - Wiring diagram .....	EC-425
Injector.....	EC-427
Injector removal and installation .....	EC-27
Instrument panel .....	BT-16
INT/L - Wiring diagram .....	EL-67
Intake air temperature sensor .....	EC-119
Intake door control linkage adjustment.....	HA-61
Intake manifold .....	EM-10
Interior.....	BT-19

## J

Jacking points.....	GI-41
---------------------	-------

## K

Keyless entry system - See Multi- remote control system.....	EL-158
Knock sensor (KS) .....	EC-229
Knuckle spindle.....	FA-9
KS - Wiring diagram.....	EC-229

## L

Length (Dimensions) .....	GI-39
License lamp.....	EL-47
Line pressure solenoid valve .....	AT-112, 123, 127
Line pressure test (A/T) .....	AT-59
Liquid gasket application .....	EM-2
Location of electrical units .....	EL-200
Lock, door .....	BT-11
Low and reverse brake .....	AT-229
Lower ball joint (rear susp.) .....	RA-22
Lubricant (R134a) A/C .....	HA-65
Lubricants .....	MA-8
Lubrication circuit (engine) .....	LC-4
Lubrication-locks, hinges and hood latches.....	MA-22

## M

MAFS - Wiring diagram .....	EC-102
Magnet clutch.....	HA-71
MAIN - Wiring diagram .....	EC-97
Main drive gear (M/T).....	MT-11
Mainshaft (M/T) .....	MT-11
Maintenance .....	MA-1
Maintenance (engine) .....	MA-10
MAJOR OVERHALL.....	AT-187
Malfunction indicator lamp (MIL).....	EC-46
Manual transmission number .....	GI-38
Manual transmission oil replacement .....	MA-17
Mass air flow sensor (MAFS).....	EC-102
Master cylinder (brake) .....	BR-9
Master cylinder (clutch) .....	CL-7
Meter .....	EL-69
METER - Wiring diagram .....	EL-71
MIL & Data link connectors circuit .....	EC-452
MIL/DL - Wiring diagram .....	EC-452
MIRROR - Wiring diagram .....	EL-122
Mirror, door .....	BT-41
Mirror, out side.....	BT-41
Misfire.....	EC-224
Mode door control linkage adjustment.....	HA-61
Model variation.....	GI-36
Molding - See Exterior.....	BT-24
M/T major overhaul .....	MT-10
M/T removal and installation .....	MT-8
Mud guard - See Exterior.....	BT-24
MULTI - Wiring diagram.....	EL-161
Multi link/lower ball joint (rear) .....	RA-22
Multi-remote control system .....	EL-158
Multiport fuel injection (MFI) system.....	EC-15
Multiport fuel injection precautions.....	GI-4

## N

Neutral position switch (M/T) .....	MT-7, 10
NVH troubleshooting (BR) .....	BR-3
NVH troubleshooting (CL) .....	CL-3
NVH troubleshooting (FA).....	FA-4
NVH troubleshooting (M/T) .....	MT-5
NVH troubleshooting (PD) .....	PD-5
NVH troubleshooting (RA) .....	RA-4
NVH troubleshooting (ST) .....	ST-5

## O

Oil pan (engine) .....	EM-12
Oil pressure (engine).....	LC-4
Oil pressure relief valve (engine) .....	LC-6
Oil pump (A/T).....	AT-202
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine) .....	EM-23

## ALPHABETICAL INDEX

Oil seal replacement (front of final drive).....	PD-10
Oil seal replacement (side of final drive).....	PD-10
Operating cylinder (clutch) .....	CL-8
Out side mirror.....	BT-41
Overdrive control switch.....	AT-172
Overrun clutch.....	AT-225
Overrun clutch solenoid valve.....	AT-112, 123, 144
Oversize piston .....	EM-41

### P

P/ANT - Wiring diagram.....	EL-117
Park/Neutral position switch.....	EC-408
Parking brake control.....	BR-26
Parking lamp.....	EL-47
PCV (positive crankcase ventilation) .....	EC-25
PGC/V - Wiring diagram.....	EC-271, 358
Pilot bushing replacement .....	EM-47
Pinion bearing preload diff. ....	PD-21
Pinion gear height diff. ....	PD-21
Piston assembly.....	EM-45
Piston pin inspection.....	EM-39
Piston ring inspection .....	EM-39
Piston to bore clearance.....	EM-40
PNP/SW - Wiring diagram .....	EC-408
POWER - Wiring diagram .....	EL-7
Power door lock.....	EL-152
Power door mirror.....	EL-122
Power steering fluid level.....	MA-21, ST-7
Power steering gear .....	ST-15
Power steering hydraulic pressure .....	ST-9
Power steering oil pressure switch .....	EC-436
Power steering oil pump.....	ST-25
Power steering system bleeding .....	ST-8
Power supply routing.....	EL-6
Power transistor & ignition coil .....	EC-318
Power window.....	EL-147
PRE/SE - Wiring diagram .....	EC-282
Precautions (General) .....	GI-2
Pressure plate - See Clutch cover .....	CL-11, 12
Pressure test (A/T).....	AT-59
Propeller shaft.....	PD-6
Propeller shaft on vehicle service.....	PD-7
Propeller shaft vibration .....	PD-7
PST/SW - Wiring diagram.....	EC-436

### R

Rack retainer adjustment.....	ST-7
Radiator .....	LC-10
Radio - See Audio.....	EL-111
Rear air spoiler .....	BT-24
Rear axle (disc brake type).....	RA-9
Rear bumper.....	BT-9
Rear combination lamp removal and installation .....	BT-24

Rear disc brake.....	BR-19
Rear panel finisher .....	BT-23
Rear seat .....	BT-33
Rear seat belt.....	RS-4
Rear side window .....	BT-40
Rear suspension .....	RA-19
Rear window .....	BT-38
Rear window defogger.....	EL-103
Refrigerant connection precaution .....	HA-3
Refrigerant general precaution .....	HA-2
Refrigerant lines .....	HA-67
Refrigeration cycle.....	HA-11
Release bearing (clutch) .....	CL-9
Removal and installation (A/T).....	AT-184
Reverse clutch.....	AT-219
Reverse idler shaft (M/T).....	MT-11
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) .....	MT-7, 10
Reverse main gear (M/T) .....	MT-11
Revolution sensor (A/T) .....	AT-88
Ring gear diff. inspection .....	PD-19
Road wheel size.....	GI-39
Roof trim .....	BT-22
Room lamp - See Interior lamp .....	EL-66
RRO2 - Wiring diagram .....	EC-181
RRO2/H - Wiring diagram.....	EC-206

### S

SAE J1930 terminology list.....	GI-45
Seal - See Exterior .....	BT-24
Seat belt inspection.....	MA-22, RS-5
Seat belt, front.....	RS-3
Seat belt, rear .....	RS-4
Seat, front .....	BT-31
Seat, rear .....	BT-33
Self-diagnostic results .....	EC-46
SHIFT - Wiring diagram .....	AT-175
Shift control components (M/T).....	MT-12
Shift fork (M/T) .....	MT-12
Shift lever .....	MT-12
Shift lock system .....	AT-174
Shift schedule.....	AT-262
Shift solenoid valve A (A/T) .....	AT-95, 104, 112, 123, 130
Shift solenoid valve B (A/T) .....	AT-95, 100, 112, 123, 134
Shock absorber (rear) .....	RA-21
Side bearing preload diff. ....	PD-20
Side trim.....	BT-19
Side window - See Rear side window.....	BT-40
Smart entrance control unit .....	EL-196
SMJ (super multiple junction).....	Foldout
Spark plug replacement.....	MA-15
Spiral cable .....	RS-12
Spot lamp.....	EL-66
Spring (Wheelarch) height.....	FA-6
SROOF - Wiring diagram .....	EL-121
SRS - See Supplemental Restraint System.....	RS-8

# ALPHABETICAL INDEX

SRS - Wiring diagram .....	RS-25
SRS Trouble diagnoses .....	RS-20
S/SIG - Wiring diagram .....	EC-428
Stabilizer bar (front) .....	FA-15
Stabilizer bar (rear) .....	RA-23
Stall test (A/T) .....	AT-56
Standardized relay .....	EL-4
START - Wiring diagram .....	EL-22
Starter .....	EL-25
Starting system .....	EL-20
Steering gear and linkage inspection .....	MA-20
Steering linkage .....	ST-15
Steering switch .....	EL-33
Steering wheel and column .....	ST-11
Steering wheel play .....	ST-6
Steering wheel turning force .....	ST-8
Stop lamp .....	EL-47
Striking rod (M/T) .....	MT-12
Strut (front) .....	FA-14
Sub-gear (M/T) .....	MT-11
Sun roof, electric .....	EL-121
Sunroof .....	BT-34
Supplemental Restraint System .....	RS-8
Supplemental restraint system - Wiring diagram .....	RS-25
SW/V - Wiring diagram .....	EC-308
Symbols and abbreviations .....	GI-8
Synchronizer (M/T) .....	MT-11

T

Tail lamp .....	EL-47
TAIL/L - Wiring diagram .....	EL-47
TCM circuit diagram .....	AT-10
TCM inspection table .....	AT-74
Tension rod (front) .....	FA-15
TFTS - Wiring diagram .....	EC-220
THEFT - Wiring diagram .....	EL-177
Theft warning system .....	EL-172
Thermostat .....	LC-9
Three way catalyst precautions .....	GI-5
Throttle bodies .....	EM-10
Throttle position sensor (TPS) .....	EC-130
Throttle position sensor adjustment .....	EC-73
Throttle position switch .....	AT-141, 173
Throwout bearing - See Clutch release bearing .....	CL-9
Thrust washer selection diff. .....	PD-27
Tie-rod .....	ST-19
Tightening torque of standard bolts .....	GI-44
Timing chain .....	EM-14
Tire rotation .....	MA-19
Tire size .....	GI-39
Tooth contact diff. .....	PD-26
Torque converter installation .....	AT-186
Torque convertor clutch solenoid valve .....	AT-112, 116, 123
Tow truck towing .....	GI-42
TP/SW - Wiring diagram .....	EC-298
TPS - Wiring diagram .....	EC-130

Transmission case (M/T) .....	MT-10
Transmission serial number .....	GI-38
Transverse link (front) .....	FA-16
Tread-FR&RR (Dimensions) .....	GI-39
Trim .....	BT-19
Triple pressure switch .....	HA-11, 60
Trunk lid .....	BT-9
Trunk lid opener - See Trunk lid .....	BT-9
Trunk room lamp .....	EL-66
Trunk room trim .....	BT-23
TURN - Wiring diagram .....	EL-57
Turn signal lamp .....	EL-54
Two-pole lift .....	GI-42

U

Under body .....	BT-44
------------------	-------

V

Vacuum cut valve .....	EC-392
Vacuum hose (brake system) .....	BR-13
Vacuum hose drawing (ECCS) .....	EC-13
Valve clearance .....	EM-32
Valve guide .....	EM-28
Valve seat .....	EM-30
Valve spring .....	EM-31
Vehicle identification number .....	GI-37
Vehicle speed sensor (VSS) .....	EC-287
VENT/V - Wiring diagram .....	EC-277
Viscosity number (SAE) .....	MA-8
VSS - Wiring diagram .....	EC-287

W

WARN - Wiring diagram .....	EL-77
Warning buzzer .....	EL-81
Warning lamps .....	EL-76
Washer, front .....	EL-90
Water pump .....	LC-8
Weatherstrip - See Exterior .....	BT-24
Wheel alignment (front) .....	FA-7
Wheel alignment (rear) .....	RA-6
Wheel balance .....	MA-19
Wheel bearing (front axle) .....	FA-6
Wheel bearing (rear) .....	RA-6
Wheel hub (front) .....	FA-9
Wheel hub (rear) .....	RA-9
Wheel sensors (ABS) .....	BR-31
Wheel size .....	GI-39
Wheelarch height .....	FA-6
Wheelbase (Dimensions) .....	GI-39
Wide open & closed throttle position switch .....	EC-130
Width (Dimensions) .....	GI-39
WINDOW - Wiring diagram .....	EL-149
Window, rear .....	BT-38

## ALPHABETICAL INDEX

---

Window, rear side .....	BT-40
Window, side - See Rear side window.....	BT-40
Windshield .....	BT-38
WIPER - Wiring diagram .....	EL-92
Wiper, front .....	EL-90
Wiring Diagram (Cell code) list.....	EL-218
Wiring diagrams .....	GI-9
Withdrawal lever (clutch) .....	CL-9